
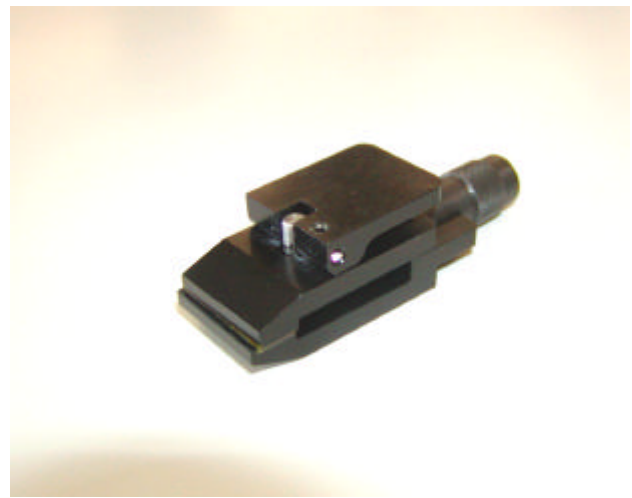


Easy operation urethane tooth film Grip / FC-21UQ

For thin films

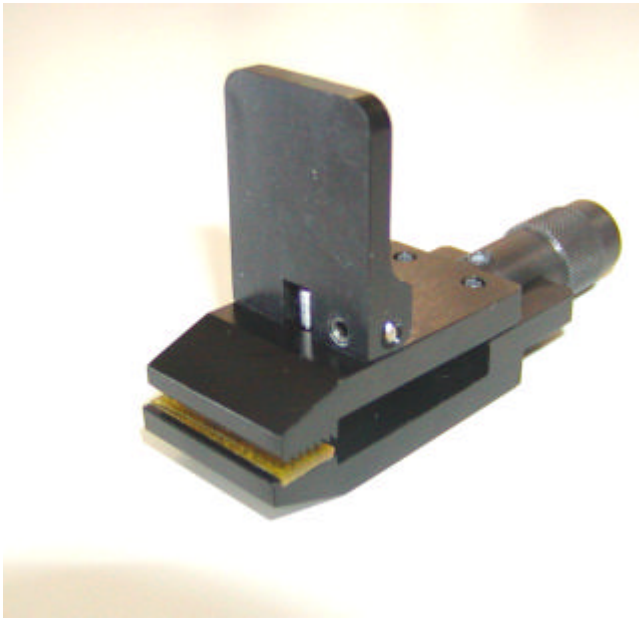

[Applications]

The film grips are installed on the IMADA force gauge for tension test of various test pieces.

General rules of plastic films for food packaging JIS Z1707 (1997)

Testing methods for heat-sealed flexible packages JIS Z0238 (1998)

Polyethylene film bags JIS Z1711 (1994)

Oriented polypropylene films for packaging JIS Z1712 (1997)

[Feature]

They are suitable for checking thin materials.

Urethane grip is suitable for thin film such as 10 – 25 micron for the reason of preventing slipping.

Urethane grip reduces the risk of cutting a sample by grip itself.


Easy operation by lever action.

Possible to adjust closing width according to thickness.

[Specifications]

Capacity	250N
Opening width	0.5mm (Adjustment-type)
Weight	50g

[Dimensions]

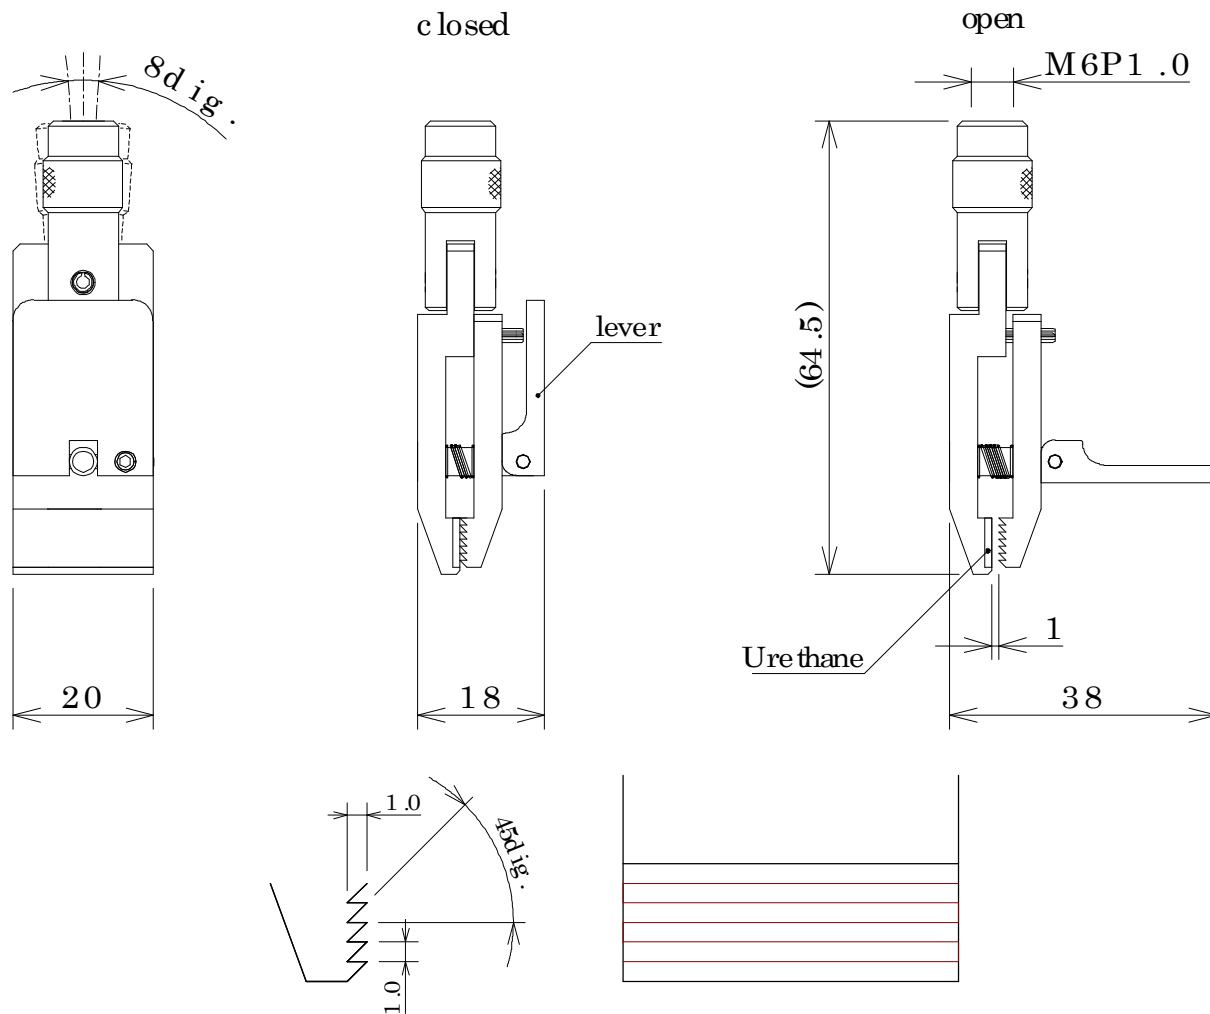

[NOTICE]

Design, appearance, and specification may be changed for modification or improvement without any prior notice.

Specific material and appearance may not be used. Please contact us for detail.